



Panel Instructions

1. Input select key
2. Prev key
3. Play/Pause key
4. Next key
5. USB jack
6. TF jack
7. Music volume control
8. Music treble control
9. Music bass control
10. Working status indicator lamp

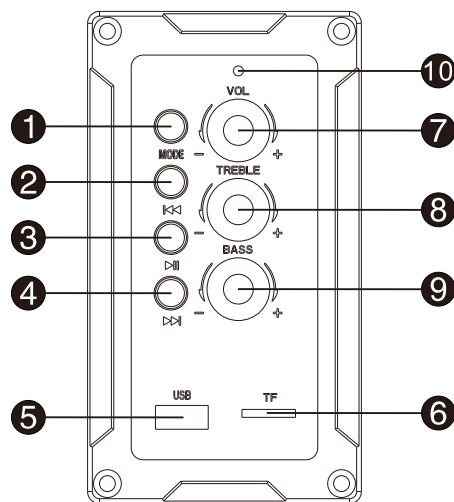

Rear Functions And Use


1. Power (AC 220V 50Hz)
2. Power switch
3. AUX right channel input
4. AUX left channel input
5. Left speaker output

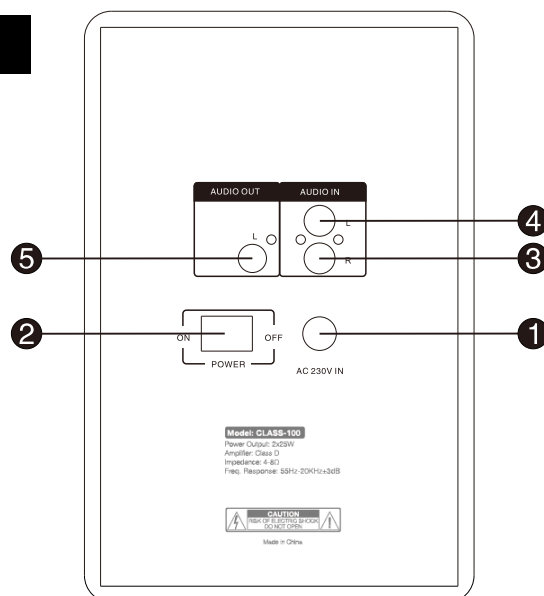

pure acoustics®

CLASS-100

Actives On-Wall Speakers System

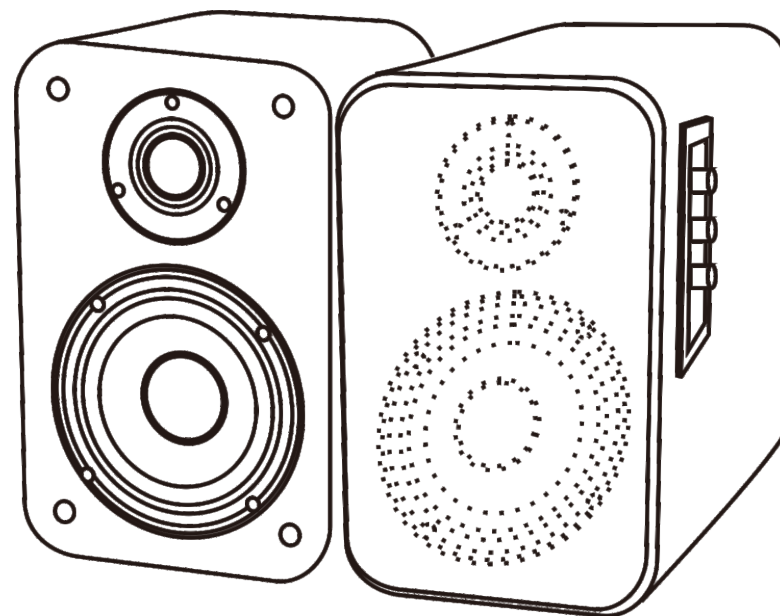

Safety Instructions

NOTES:

- 1 .Please install the appliance in a dry and cleaning place, keep avoid in a dusty,damp or direct sunlight place.
- 2.When moving this appliance, please pull out the power plug and disconnect other equipment wires.
- 3.To prevent damage to the appliance, please keep the place ventilated.
- 4.Before turn on the power, please set up the volume in lowest level, then adjust it under your request.
- 5.Please unplug from the power outlet if not in use.
- 6.Please don't press the switch and other components heavily.
- 7.When confirm the appliance is break down, please read this instruction book.

Listing

When open the carton,please check the accessories is complete or not:

- 1、 Right Speaker 1
- 2、 Left Speaker 1
- 3、 Audio Cable 1
- 4、 User manual 1

Technical Specification

Description	Active On-Wall Speaker System
Driver Units	4 Inch + 1 Inch
Output Power	25W x 2
Frequency Response	30Hz~20 KHz
Signal Noise	78dB
Input Sensitivity	600mv
Power Input	AC110V-220V 50/60Hz

Music Mode

- Put the TF card or U disk,auto switch to music mode.
- Press the play/pause key ,the device will be pause playing,then press the key twice to continue playing.
- Press the Prev & Next key select track .

Trouble Shooting

Please check the following guide for the possible cause and solution for a problem before contacting the service centre or dealer for repairs:

No sound

- 1 .Check to make sure that the power connection is secure.
- 2.Check to make sure that the Audio supply equipment has been turned on.