



Instruction Manual

Instruction Manual

You are welcome to purchase and use the company's digital active speakers, to ensure the safe use of this product to achieve the best results, please read this manual carefully.

This product can be connected to PC, TV, CD, VCD, DVD, TUNER, TAPE, USB, TF, BT and other audio equipment, it is easy to carry, fully functional perfect design, excellent sound quality performance, I believe will bring you New feeling.


Warmth prompt

When charging the unit, please turn off the power switch, so as not to appear the phenomenon of battery failure, do not use the machine for a long time, please every 30 days or so for the local charge and discharge time, so as not to use for a long time, resulting in battery capacity decline Or damaged.

Technical Parameters

- output Power: 5W
- frequency response: 40Hz-16Khz
- speaker unit: 4inch*1
- signal-to-noise ratio: $\geq 85\text{dB}$
- impedance: 2 ohm
- total harmonic distortion: ≤ 0.05 1W

PANEL FUNCTION DECLARATION

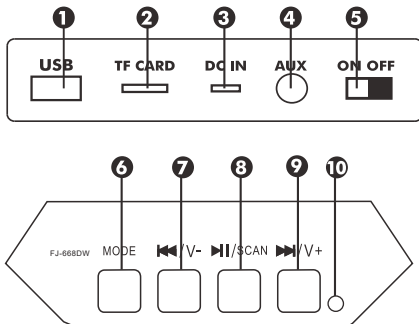

- 1、USB socket
- 2、Micro SD card socket
- 3、Charging socket(DC 5V)
- 4、Audio input pin
- 5、Power control switch
- 6、Mode:LIN、MP3、FM、BT
- 7、Previous(FM:On a radio)
- 8、Play/pause(FM:Automatic search)
- 9、Next song(FM:The next channel)
- 10、Power Indicator

Connectng to BT

- Press " MODE " until you hear two beeps. BT Mode is on.
- Turn on your smartphone's BT and search for the device. Then you will read on smartphone.
- Connect with click the ok on smartphone.
- "Connected" message will appear. Connecton is successful.
(play and select music with smartphone when connected through BT).

Micro SD Function

- Press "MODE" on remote or "Mode" on back panel to switch to TF Mode or just insert a Micro SD card.
TF mode will start automatcally.
- Press "PLAY/PAUSE" to contnue play/pause music.
- Press "NEXT" buton to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

USB Function

- Press "MODE" on remote or "Mode" on back panel to switch to USB Mode or just insert a USB flash drive.
USB mode will start automatcally.
- Press "PLAY/PAUSE" to contnue play/pause music.
- Press "NEXT" buton to go to next song.
- Press "PREVIOUS" to go back to previous song.
- Press "REPEAT" to replay same song.

FM Radio Function

- Press "MODE" on remote or "Mode" on back panel to switch to FM Mode. Radio will start automatically.
- Press "PLAY/PAUSE" to enter into automatic FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

To connect two together using WaveSync™, hold the play/pause button on both units at the same time 3 seconds while in Bluetooth mode.

Then follow the instructions for connecting your bluetooth device.